

# CLASSIC ARMS PRODUCTIONS

## Trigger Tied Guns Prohibited In the Show

Confirm the action is clear of ammo, cut tie off and replace with the appropriate gun tie method (shown in this brochure) before being returned to a customer or placed on a vendor's table for display. No exceptions.



## Tip Up Pistol

-Tie through the barrel



## Half Slide Pistol

-Tie through the barrel



## AR Platform Rifle/Pistol

-Remove mag, check for ammo in chamber. Close bolt & tie across charging handle. Pull trigger while pointing at floor. If bolt is left locked open, mag can be inserted & the bolt closed chambering a round



## Semi Auto

(Glock, Internal Cylinder, Luger)



Mag out



Mag may be left in or out

## Revolver W/Out Hammer

-Tie through cylinder & around frame



## Revolver W/ Hammer

Single/DA or black powder

-Tied through cylinder & wrap once around hammer



## Half Slide Rifle

-Tie tight through trigger guard & action



## Black Powder Handgun/Rifle

-Check & remove active primers & barrel is clear. (Use loading rod to check). Tie hammer around frame to ensure it will not strike the primer if fired



## Bolt Action Rifle

Without Bolt



With Bolt (Tie Open)



# CLASSIC ARMS PRODUCTIONS

## Semi Auto/Pump Action Shot Gun

-Tie through loading gate & out of action to prevent shell from being inserted. Leave action locked open if possible



## Bottom Load/Bottom Eject

-Tie by the pump mechanism (Ithaca & Mossberg)  
-Tie through trigger guard to the front of the pump mechanism (takes 2 ties)



## Break Action Shot Gun/Rifle

Single/Double Barrel



-If there is a hammer, gun can be closed w/ the hammer tied back



Without a hammer, tie w/ action open

## Semi Auto Rifle

-Tie w/ action open. Keep mags separate from gun. If mag not detachable, pull bolt back & tie w/ action open



## Lever Action Rifle

-Tie w/ hammer back & between the hammer & the hammer block around & through lever



## Ruger #1 & 3 Rifle

-Tied W/ Action Open



Ruger Number One and Three Rifles in battery, can be fired.

Ruger Number One And Three Rifles action disabled, cannot be fired.

## Folding Rifles

-AR Platform. Mag Out, chamber clear, tie across cross charging handle w/ bolt closed  
-Objective of tying folding rifle is to disable the action, not to keep from being unfolded



## UZI

-Action will not lock open.  
-Tie in front of operating handle pulled all the way back & behind pistol grip

Action held open by tie



-Tie through barrel w/ action locked open

## Tube & Bottom Load .22 Cal Rifle

-Ensure guns are fully unloaded. Check chamber, remove tube & shake gun, use bore light, open & close action multiple times w/out pulling trigger. Recheck chamber each time action is worked. Bottom loading need extra inspection since there is no tube to remove & checking loading mechanism is not really achievable. Once cleared, tie action open if possible. If no lever to tie action open, tie must be put into barrel through the action. If cannot be secured, it will not be allowed in show.

